

Designer Drywall

CAN BE USED TO CREATE
STYLISH INTERIORS AT A
FRACTION OF THE COST
OF TRADITIONAL WOOD
PANELING. HERE, THE
DECORATIVE WALL PANELS
ADD JUST THE RIGHT
TOUCH OF ELEGANCE TO
AN OTHERWISE PLAIN
ROOM. RAISED WALL
PANELS CAN BE
INSTALLED OVER
EXISTING DRYWALL OR
DIRECTLY TO STUD WALLS.

DO IT YOURSELF OR
INSTALL PROFESSIONALLY.



WARRANTY

This product warranted against factory defects for a period of up to one year. Remedy under this warranty is limited to replacement of defective items by Pittcon Industries. Warranty does not cover cost of subsequent or consequent damages, and in no case shall Pittcon Industries be liable in any amount greater than the original purchase price plus initial shipping costs.

www.designerdrywall.com

©2005 Pittcon Industries


Designer Drywall

Beautiful, Affordable
And Easy To Install





RAISED PANEL CEILING

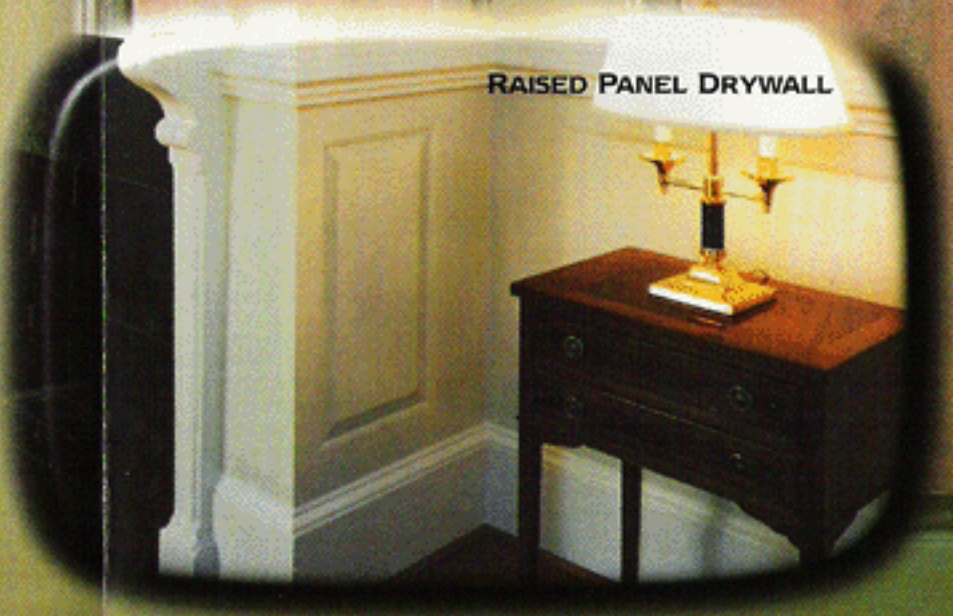


RAISED PANEL DRYWALL




Designer Drywall

INSTRUCTIONS FOR EASY INSTALLATION

Wainscot

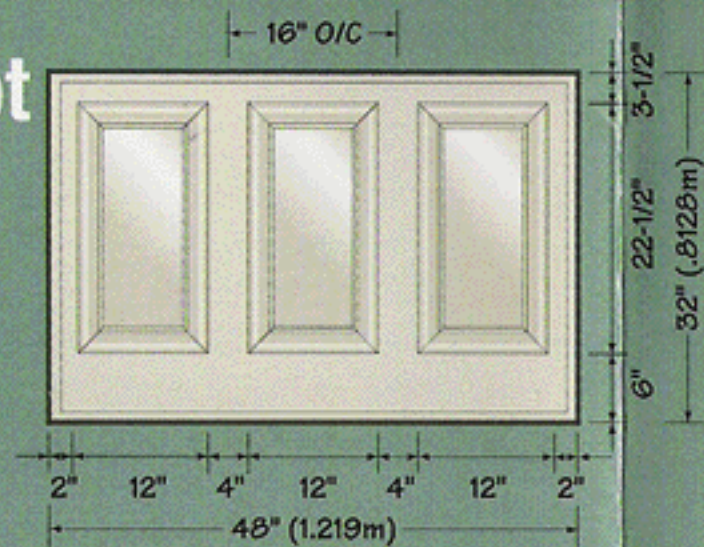

Ceiling

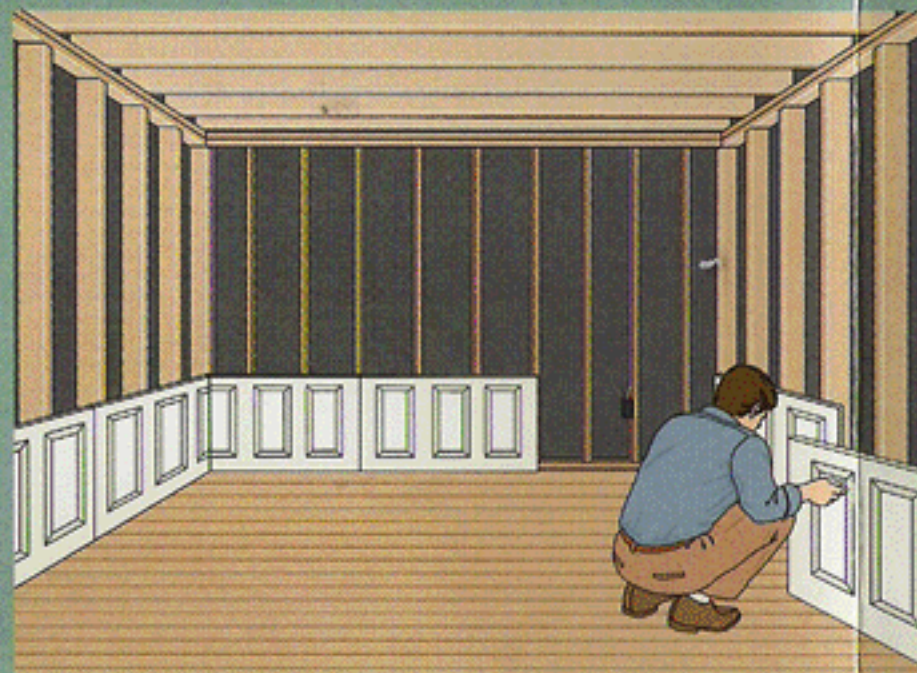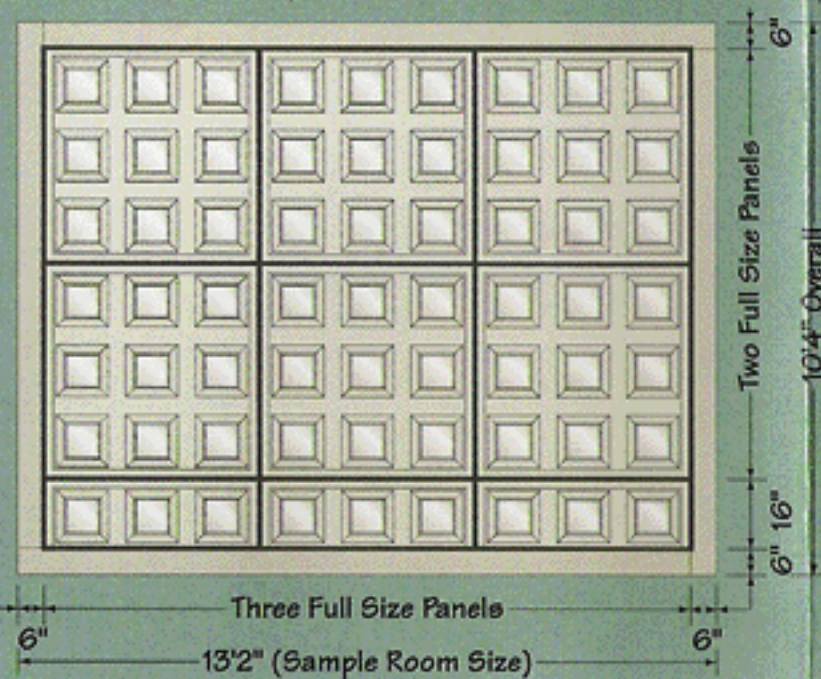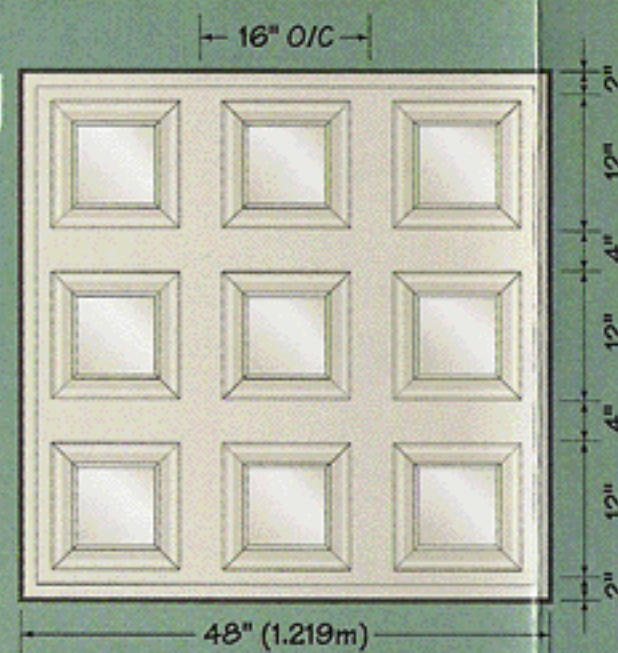


1 ROOM LAYOUT: Layout panels, taking into consideration wall outlets, corner conditions, and door openings. You may want to relocate outlets so that openings do not occur in embossed areas.

1 Prepare a layout. Determine a configuration of panels prior to installing. Never start with a full panel in the corner without consideration of end conditions. A border can be created using 1/2" thick standard drywall, as shown above.

SPECIAL ORDER ITEMS




Upper Wall

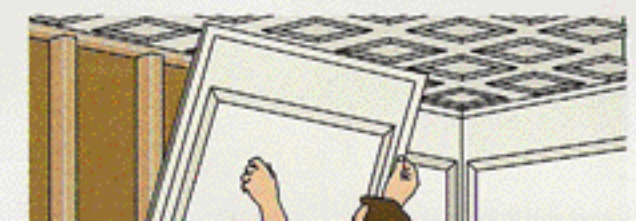



2 PANEL INSTALLATION: Install first panel, using a string line, aligning edge of embossed pattern with pattern on adjacent panel. (Do not align by edge of drywall itself as board can be slightly out of square.) Use drywall screws to fasten panels.

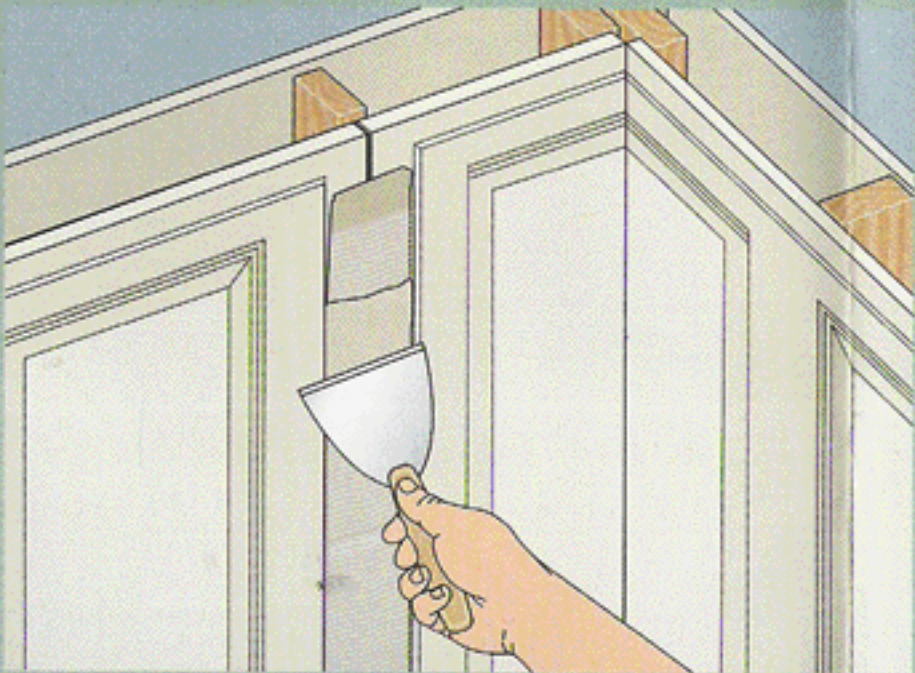

3 TAPE & SPACKLE JOINTS: Use conventional 2" wide paper tape and ready mixed joint compound to fill joints. Best results can be achieved using a 3-1/2" to 4" wide knife. Lightly sand to fair all joints. Inside corners are formed by scoring the back of the panel and then folding it 90° or by stopping the panel short and using conventional drywall as filler.

Pittcon Industries

For Technical Assistance and Information
Please Call 1•800•637•7638




2 Install first panel, using a string line, aligning edge of embossed pattern with pattern on adjacent panel. (Do not align by edge of drywall itself as board can be slightly out of square.) Use drywall screws to fasten panels.



3 Use conventional 2" wide paper tape and ready mixed joint compound to fill joints. Best results can be achieved using a 3-1/2" to 4" wide knife. Lightly sand to fair all joints.

DO'S & DON'TS


- 1) Store Designer Drywall Panels Flat in a Dry Area.
- 2) Carry Designer Drywall Panels in an Upright Position. Do not Bend.
- 3) Designer Drywall Panels Must be Primed with a High Quality Oil Based Primer.
- 4) Do not use Nails to Fasten Panels.

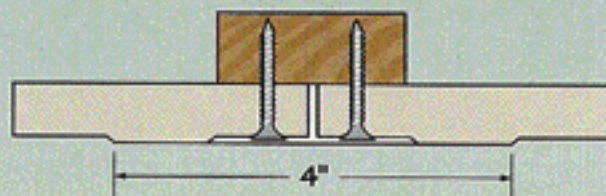


Do Not Abut Panels. Maintain 4" Width Between Edges of Embossed Pattern.



Grand Upper Wall

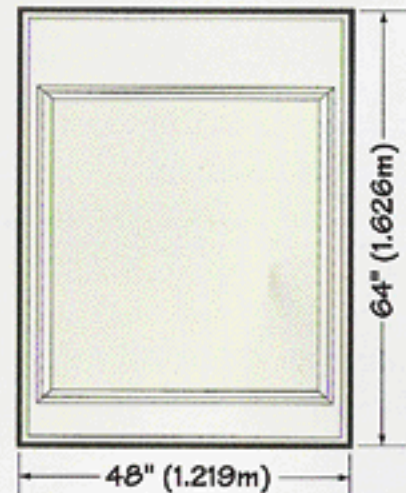

Grand Wainscot

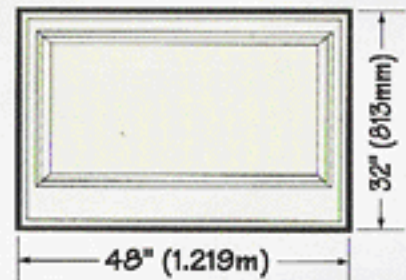

Stairwell

